

DMX Values

6 Ch

| Channel | Function | Value | Percent/Setting |
|-----------|--|-----------|-------------------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| 2 | Dimmer fine | 000 ⇔ 255 | 0–100% |
| 3 | Strobe | 000 ⇔ 010 | No function |
| | | 011 ⇔ 255 | Strobe, slow to fast |
| 4 | Auto programs | 000 ⇔ 010 | No function |
| | | 011 ⇔ 085 | Auto program 1 |
| | | 086 ⇔ 170 | Auto program 2 |
| | | 171 ⇔ 255 | Auto program 3 |
| 5 | Auto speed | 000 ⇔ 255 | 0–100% |
| 6 | Control (hold for 3 seconds, then release) | 000 ⇔ 007 | No function |
| | | 008 ⇔ 015 | Dimmer reset |
| | | 016 ⇔ 023 | Dimmer: S-Curve |
| | | 024 ⇔ 031 | Dimmer: linear |
| | | 032 ⇔ 039 | Dimmer: square |
| | | 040 ⇔ 047 | Dimmer: inverted square |
| | | 048 ⇔ 055 | Dimmer speed mode off |
| | | 056 ⇔ 063 | Dimmer speed mode 1 |
| | | 064 ⇔ 071 | Dimmer speed mode 2 |
| | | 072 ⇔ 079 | Dimmer speed mode 3 |
| | | 080 ⇔ 087 | Fan auto |
| | | 088 ⇔ 095 | Fan on |
| | | 096 ⇔ 103 | Fan off |
| | | 104 ⇔ 111 | Fan silent |
| 112 ⇔ 255 | No function (reserved) | | |

3 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|-----------|----------------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| 2 | Dimmer fine | 000 ⇔ 255 | 0–100% |
| 3 | Strobe | 000 ⇔ 010 | No function |
| | | 011 ⇔ 255 | Strobe, slow to fast |

2 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|-----------|-----------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0–100% |

1 Ch

| Channel | Function | Value | Percent/Setting |
|---------|----------|-----------|-----------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |