

## QUICK REFERENCE GUIDE



### Rogue R1 Beam Wash

#### DMX Values

#### 21CH

| Channel   | Function                          | Value     | Percent/Setting                         |
|-----------|-----------------------------------|-----------|---|
| 1         | Pan                               | 000 ⇔ 255 | 0–100%                                  |
| 2         | Fine Pan                          | 000 ⇔ 255 | Fine control (16-bit)                   |
| 3         | Tilt                              | 000 ⇔ 255 | 0–100%                                  |
| 4         | Fine Tilt                         | 000 ⇔ 255 | Fine control (16-bit)                   |
| 5         | Pan/Tilt Speed                    | 000 ⇔ 255 | Fast to slow                            |
| 6         | Dimmer                            | 000 ⇔ 255 | 0–100%                                  |
| 7         | Fine Dimmer                       | 000 ⇔ 255 | Fine control (16-bit)                   |
| 8         | Strobe                            | 000 ⇔ 019 | Off                                     |
|           |                                   | 020 ⇔ 024 | On                                      |
|           |                                   | 025 ⇔ 064 | Strobe, fast to slow                    |
|           |                                   | 065 ⇔ 069 | On                                      |
|           |                                   | 070 ⇔ 084 | Fast on, slow off (fast to slow)        |
|           |                                   | 085 ⇔ 089 | On                                      |
|           |                                   | 090 ⇔ 104 | Slow on, fast off (fast to slow)        |
|           |                                   | 105 ⇔ 109 | On                                      |
|           |                                   | 110 ⇔ 124 | Random strobe, fast to slow             |
|           |                                   | 125 ⇔ 129 | On                                      |
|           |                                   | 130 ⇔ 144 | Random fast on, slow off (fast to slow) |
|           |                                   | 145 ⇔ 149 | On                                      |
|           |                                   | 150 ⇔ 164 | Random slow on, fast off (fast to slow) |
|           |                                   | 165 ⇔ 169 | On                                      |
|           |                                   | 170 ⇔ 184 | Pulse strobe, fast to slow              |
|           |                                   | 184 ⇔ 189 | On                                      |
| 190 ⇔ 204 | Random pulse strobe, fast to slow |           |   |
| 205 ⇔ 209 | On                                |           |   |
| 210 ⇔ 224 | Slow on, slow off (fast to slow)  |           |   |
| 225 ⇔ 229 | On                                |           |   |
| 230 ⇔ 244 | Pulse strobe, fast to slow        |           |   |
| 245 ⇔ 255 | On                                |           |   |
| 9         | Red                               | 000 ⇔ 255 | 0–100%                                  |
| 10        | Fine Red                          | 000 ⇔ 255 | Fine control (16-bit)                   |
| 11        | Green                             | 000 ⇔ 255 | 0–100%                                  |
| 12        | Fine Green                        | 000 ⇔ 255 | Fine control (16-bit)                   |
| 13        | Blue                              | 000 ⇔ 255 | 0–100%                                  |
| 14        | Fine Blue                         | 000 ⇔ 255 | Fine control (16-bit)                   |
| 15        | White                             | 000 ⇔ 255 | 0–100%                                  |
| 16        | Fine White                        | 000 ⇔ 255 | Fine control (16-bit)                   |

| Channel   | Function                           | Value     | Percent/Setting |
|-----------|------------------------------------|-----------|-----------------|
| 17        | Color                              | 000 ⇔ 004 | No function     |
|           |                                    | 005 ⇔ 009 | Color 1         |
|           |                                    | 010 ⇔ 014 | Color 2         |
|           |                                    | 015 ⇔ 019 | Color 3         |
|           |                                    | 020 ⇔ 024 | Color 4         |
|           |                                    | 025 ⇔ 029 | Color 5         |
|           |                                    | 030 ⇔ 034 | Color 6         |
|           |                                    | 035 ⇔ 039 | Color 7         |
|           |                                    | 040 ⇔ 044 | Color 8         |
|           |                                    | 045 ⇔ 049 | Color 9         |
|           |                                    | 050 ⇔ 054 | Color 10        |
|           |                                    | 055 ⇔ 059 | Color 11        |
|           |                                    | 060 ⇔ 064 | Color 12        |
|           |                                    | 065 ⇔ 069 | Color 13        |
|           |                                    | 070 ⇔ 074 | Color 14        |
|           |                                    | 075 ⇔ 079 | Color 15        |
|           |                                    | 080 ⇔ 084 | Color 16        |
|           |                                    | 085 ⇔ 089 | Color 17        |
|           |                                    | 090 ⇔ 094 | Color 18        |
|           |                                    | 095 ⇔ 099 | Color 19        |
|           |                                    | 100 ⇔ 104 | Color 20        |
|           |                                    | 105 ⇔ 109 | Color 21        |
|           |                                    | 110 ⇔ 114 | Color 22        |
|           |                                    | 115 ⇔ 119 | Color 23        |
|           |                                    | 120 ⇔ 124 | Color 24        |
|           |                                    | 125 ⇔ 129 | Color 25        |
|           |                                    | 130 ⇔ 134 | Color 26        |
|           |                                    | 135 ⇔ 139 | Color 27        |
|           |                                    | 140 ⇔ 144 | Color 28        |
|           |                                    | 145 ⇔ 149 | Color 29        |
| 150 ⇔ 154 | Color 30                           |           |                 |
| 155 ⇔ 159 | Color 31                           |           |                 |
| 160 ⇔ 164 | Color 32                           |           |                 |
| 165 ⇔ 169 | Color 33                           |           |                 |
| 170 ⇔ 174 | Color 34                           |           |                 |
| 175 ⇔ 179 | No function                        |           |                 |
| 180 ⇔ 201 | Color scroll, fast to slow         |           |                 |
| 202 ⇔ 207 | Hold                               |           |                 |
| 208 ⇔ 229 | Reverse color scroll, fast to slow |           |                 |
| 230 ⇔ 234 | No function                        |           |                 |
| 235 ⇔ 249 | Color snap, fast to slow           |           |                 |
| 250 ⇔ 255 | No function                        |           |                 |
| 18        | Zoom                               | 000 ⇔ 255 | 0–100%          |

## QUICK REFERENCE GUIDE



### Rogue R1 Beam Wash

| Channel   | Function                                      | Value     | Percent/Setting                    |
|-----------|---|-----------|------------------------------------|
| 19        | <b>Movement Macros</b>                        | 000 ⇔ 007 | No function                        |
|           |   | 008 ⇔ 023 | Movement macro 1                   |
|           |   | 024 ⇔ 039 | Movement macro 2                   |
|           |   | 040 ⇔ 055 | Movement macro 3                   |
|           |   | 056 ⇔ 071 | Movement macro 4                   |
|           |   | 072 ⇔ 087 | Movement macro 5                   |
|           |   | 088 ⇔ 103 | Movement macro 6                   |
|           |   | 104 ⇔ 119 | Movement macro 7                   |
|           |   | 120 ⇔ 135 | Movement macro 8                   |
|           |   | 136 ⇔ 151 | Movement macro 9                   |
|           |   | 152 ⇔ 167 | Movement macro 10                  |
|           |   | 168 ⇔ 183 | Movement macro 11                  |
|           |   | 184 ⇔ 199 | Movement macro 12                  |
|           |   | 200 ⇔ 215 | Movement macro 13                  |
|           |   | 216 ⇔ 231 | Movement macro 14                  |
|           |   | 232 ⇔ 247 | Movement macro 15                  |
| 248 ⇔ 255 | Movement macro 16                             |           |                                    |
| 20        | <b>Movement Macro Speed</b>                   | 000 ⇔ 255 | Movement macro speed, fast to slow |
| 21        | <b>Control</b><br>(5 second activation delay) | 000 ⇔ 009 | No function                        |
|           |   | 010 ⇔ 014 | Blackout during pan/tilt           |
|           |   | 015 ⇔ 049 | No function                        |
|           |   | 050 ⇔ 054 | Pan reset                          |
|           |   | 055 ⇔ 059 | Tilt reset                         |
|           |   | 060 ⇔ 064 | Zoom reset                         |
|           |   | 065 ⇔ 069 | No function                        |
|           |   | 070 ⇔ 074 | Reset all                          |
|           |   | 075 ⇔ 079 | No function                        |
|           |   | 080 ⇔ 084 | Reverse pan and tilt movement      |
|           |   | 085 ⇔ 089 | Reverse pan movement               |
|           |   | 090 ⇔ 094 | Reverse tilt movement              |
|           |   | 095 ⇔ 099 | Normal pan movement                |
|           |   | 100 ⇔ 104 | Normal tilt movement               |
|           |   | 105 ⇔ 109 | Normal pan and tilt movement       |
|           |   | 110 ⇔ 119 | No function                        |
|           |   | 120 ⇔ 124 | Fan ECO mode                       |
|           |   | 125 ⇔ 129 | Fan full speed                     |
|           |   | 130 ⇔ 134 | Fan auto mode                      |
|           |   | 135 ⇔ 139 | Fast dimmer curve                  |
|           |   | 140 ⇔ 144 | Smooth dimmer curve                |
|           |   | 145 ⇔ 240 | No function                        |
|           |   | 241 ⇔ 245 | White mode on                      |
|           |   | 246 ⇔ 250 | White mode off                     |
| 251 ⇔ 255 | No function                                   |           |                                    |

19CH

| Channel   | Function                          | Value     | Percent/Setting                         |
|-----------|-----------------------------------|-----------|---|
| 1         | Pan                               | 000 ⇔ 255 | 0–100%                                  |
| 2         | Fine Pan                          | 000 ⇔ 255 | Fine control (16-bit)                   |
| 3         | Tilt                              | 000 ⇔ 255 | 0–100%                                  |
| 4         | Fine Tilt                         | 000 ⇔ 255 | Fine control (16-bit)                   |
| 5         | Pan/Tilt Speed                    | 000 ⇔ 255 | Fast to slow                            |
| 6         | Dimmer                            | 000 ⇔ 255 | 0–100%                                  |
| 7         | Fine Dimmer                       | 000 ⇔ 255 | Fine control (16-bit)                   |
| 8         | Strobe                            | 000 ⇔ 019 | Off                                     |
|           |                                   | 020 ⇔ 024 | On                                      |
|           |                                   | 025 ⇔ 064 | Strobe, fast to slow                    |
|           |                                   | 065 ⇔ 069 | On                                      |
|           |                                   | 070 ⇔ 084 | Fast on, slow off (fast to slow)        |
|           |                                   | 085 ⇔ 089 | On                                      |
|           |                                   | 090 ⇔ 104 | Slow on, fast off (fast to slow)        |
|           |                                   | 105 ⇔ 109 | On                                      |
|           |                                   | 110 ⇔ 124 | Random strobe, fast to slow             |
|           |                                   | 125 ⇔ 129 | On                                      |
|           |                                   | 130 ⇔ 144 | Random fast on, slow off (fast to slow) |
|           |                                   | 145 ⇔ 149 | On                                      |
|           |                                   | 150 ⇔ 164 | Random slow on, fast off (fast to slow) |
|           |                                   | 165 ⇔ 169 | On                                      |
| 170 ⇔ 184 | Pulse strobe, fast to slow        |           |   |
| 184 ⇔ 189 | On                                |           |   |
| 190 ⇔ 204 | Random pulse strobe, fast to slow |           |   |
| 205 ⇔ 209 | On                                |           |   |
| 210 ⇔ 224 | Slow on, slow off (fast to slow)  |           |   |
| 225 ⇔ 229 | On                                |           |   |
| 230 ⇔ 244 | Pulse strobe, fast to slow        |           |   |
| 245 ⇔ 255 | On                                |           |   |
| 9         | Red                               | 000 ⇔ 255 | 0–100%                                  |
| 10        | Fine Red                          | 000 ⇔ 255 | Fine control (16-bit)                   |
| 11        | Green                             | 000 ⇔ 255 | 0–100%                                  |
| 12        | Fine Green                        | 000 ⇔ 255 | Fine control (16-bit)                   |
| 13        | Blue                              | 000 ⇔ 255 | 0–100%                                  |
| 14        | Fine Blue                         | 000 ⇔ 255 | Fine control (16-bit)                   |
| 15        | White                             | 000 ⇔ 255 | 0–100%                                  |
| 16        | Fine White                        | 000 ⇔ 255 | Fine control (16-bit)                   |

## QUICK REFERENCE GUIDE



### Rogue R1 Beam Wash

| Channel   | Function                           | Value     | Percent/Setting |
|-----------|------------------------------------|-----------|-----------------|
| 17        | Color                              | 000 ⇔ 004 | No function     |
|           |                                    | 005 ⇔ 009 | Color 1         |
|           |                                    | 010 ⇔ 014 | Color 2         |
|           |                                    | 015 ⇔ 019 | Color 3         |
|           |                                    | 020 ⇔ 024 | Color 4         |
|           |                                    | 025 ⇔ 029 | Color 5         |
|           |                                    | 030 ⇔ 034 | Color 6         |
|           |                                    | 035 ⇔ 039 | Color 7         |
|           |                                    | 040 ⇔ 044 | Color 8         |
|           |                                    | 045 ⇔ 049 | Color 9         |
|           |                                    | 050 ⇔ 054 | Color 10        |
|           |                                    | 055 ⇔ 059 | Color 11        |
|           |                                    | 060 ⇔ 064 | Color 12        |
|           |                                    | 065 ⇔ 069 | Color 13        |
|           |                                    | 070 ⇔ 074 | Color 14        |
|           |                                    | 075 ⇔ 079 | Color 15        |
|           |                                    | 080 ⇔ 084 | Color 16        |
|           |                                    | 085 ⇔ 089 | Color 17        |
|           |                                    | 090 ⇔ 094 | Color 18        |
|           |                                    | 095 ⇔ 099 | Color 19        |
|           |                                    | 100 ⇔ 104 | Color 20        |
|           |                                    | 105 ⇔ 109 | Color 21        |
|           |                                    | 110 ⇔ 114 | Color 22        |
|           |                                    | 115 ⇔ 119 | Color 23        |
|           |                                    | 120 ⇔ 124 | Color 24        |
|           |                                    | 125 ⇔ 129 | Color 25        |
|           |                                    | 130 ⇔ 134 | Color 26        |
|           |                                    | 135 ⇔ 139 | Color 27        |
|           |                                    | 140 ⇔ 144 | Color 28        |
|           |                                    | 145 ⇔ 149 | Color 29        |
|           |                                    | 150 ⇔ 154 | Color 30        |
|           |                                    | 155 ⇔ 159 | Color 31        |
|           |                                    | 160 ⇔ 164 | Color 32        |
|           |                                    | 165 ⇔ 169 | Color 33        |
| 170 ⇔ 174 | Color 34                           |           |                 |
| 175 ⇔ 179 | No function                        |           |                 |
| 180 ⇔ 201 | Color scroll, fast to slow         |           |                 |
| 202 ⇔ 207 | Hold                               |           |                 |
| 208 ⇔ 229 | Reverse color scroll, fast to slow |           |                 |
| 230 ⇔ 234 | No function                        |           |                 |
| 235 ⇔ 249 | Color snap, fast to slow           |           |                 |
| 250 ⇔ 255 | No function                        |           |                 |
| 18        | Zoom                               | 000 ⇔ 255 | 0–100%          |

| Channel   | Function                               | Value     | Percent/Setting               |
|-----------|--|-----------|-------------------------------|
| 19        | Control<br>(5 second activation delay) | 000 ⇔ 009 | No function                   |
|           |  | 010 ⇔ 014 | Blackout during pan/tilt      |
|           |  | 015 ⇔ 049 | No function                   |
|           |  | 050 ⇔ 054 | Pan reset                     |
|           |  | 055 ⇔ 059 | Tilt reset                    |
|           |  | 060 ⇔ 064 | Zoom reset                    |
|           |  | 065 ⇔ 069 | No function                   |
|           |  | 070 ⇔ 074 | Reset all                     |
|           |  | 075 ⇔ 079 | No function                   |
|           |  | 080 ⇔ 084 | Reverse pan and tilt movement |
|           |  | 085 ⇔ 089 | Reverse pan movement          |
|           |  | 090 ⇔ 094 | Reverse tilt movement         |
|           |  | 095 ⇔ 099 | Normal pan movement           |
|           |  | 100 ⇔ 104 | Normal tilt movement          |
|           |  | 105 ⇔ 109 | Normal pan and tilt movement  |
|           |  | 110 ⇔ 119 | No function                   |
|           |  | 120 ⇔ 124 | Fan ECO mode                  |
|           |  | 125 ⇔ 129 | Fan full speed                |
|           |  | 130 ⇔ 134 | Fan auto mode                 |
|           |  | 135 ⇔ 139 | Fast dimmer curve             |
|           |  | 140 ⇔ 144 | Smooth dimmer curve           |
|           |  | 145 ⇔ 240 | No function                   |
| 241 ⇔ 245 | White mode on                          |           |                               |
| 246 ⇔ 250 | White mode off                         |           |                               |
| 251 ⇔ 255 | No function                            |           |                               |

## QUICK REFERENCE GUIDE



### Rogue R1 Beam Wash

#### 15CH

| Channel   | Function                          | Value     | Percent/Setting                         |
|-----------|-----------------------------------|-----------|---|
| 1         | Pan                               | 000 ⇔ 255 | 0–100%                                  |
| 2         | Fine Pan                          | 000 ⇔ 255 | Fine control (16-bit)                   |
| 3         | Tilt                              | 000 ⇔ 255 | 0–100%                                  |
| 4         | Fine Tilt                         | 000 ⇔ 255 | Fine control (16-bit)                   |
| 5         | Pan/Tilt Speed                    | 000 ⇔ 255 | Fast to slow                            |
| 6         | Dimmer                            | 000 ⇔ 255 | 0–100%                                  |
| 7         | Fine Dimmer                       | 000 ⇔ 255 | Fine control (16-bit)                   |
| 8         | Strobe                            | 000 ⇔ 019 | Off                                     |
|           |                                   | 020 ⇔ 024 | On                                      |
|           |                                   | 025 ⇔ 064 | Strobe, fast to slow                    |
|           |                                   | 065 ⇔ 069 | On                                      |
|           |                                   | 070 ⇔ 084 | Fast on, slow off (fast to slow)        |
|           |                                   | 085 ⇔ 089 | On                                      |
|           |                                   | 090 ⇔ 104 | Slow on, fast off (fast to slow)        |
|           |                                   | 105 ⇔ 109 | On                                      |
|           |                                   | 110 ⇔ 124 | Random strobe, fast to slow             |
|           |                                   | 125 ⇔ 129 | On                                      |
|           |                                   | 130 ⇔ 144 | Random fast on, slow off (fast to slow) |
|           |                                   | 145 ⇔ 149 | On                                      |
|           |                                   | 150 ⇔ 164 | Random slow on, fast off (fast to slow) |
|           |                                   | 165 ⇔ 169 | On                                      |
|           |                                   | 170 ⇔ 184 | Pulse strobe, fast to slow              |
| 184 ⇔ 189 | On                                |           |   |
| 190 ⇔ 204 | Random pulse strobe, fast to slow |           |   |
| 205 ⇔ 209 | On                                |           |   |
| 210 ⇔ 224 | Slow on, slow off (fast to slow)  |           |   |
| 225 ⇔ 229 | On                                |           |   |
| 230 ⇔ 244 | Pulse strobe, fast to slow        |           |   |
| 245 ⇔ 255 | On                                |           |   |
| 9         | Red                               | 000 ⇔ 255 | 0–100%                                  |
| 10        | Green                             | 000 ⇔ 255 | 0–100%                                  |
| 11        | Blue                              | 000 ⇔ 255 | 0–100%                                  |
| 12        | White                             | 000 ⇔ 255 | 0–100%                                  |

| Channel   | Function                           | Value     | Percent/Setting |
|-----------|------------------------------------|-----------|-----------------|
| 13        | Color                              | 000 ⇔ 004 | No function     |
|           |                                    | 005 ⇔ 009 | Color 1         |
|           |                                    | 010 ⇔ 014 | Color 2         |
|           |                                    | 015 ⇔ 019 | Color 3         |
|           |                                    | 020 ⇔ 024 | Color 4         |
|           |                                    | 025 ⇔ 029 | Color 5         |
|           |                                    | 030 ⇔ 034 | Color 6         |
|           |                                    | 035 ⇔ 039 | Color 7         |
|           |                                    | 040 ⇔ 044 | Color 8         |
|           |                                    | 045 ⇔ 049 | Color 9         |
|           |                                    | 050 ⇔ 054 | Color 10        |
|           |                                    | 055 ⇔ 059 | Color 11        |
|           |                                    | 060 ⇔ 064 | Color 12        |
|           |                                    | 065 ⇔ 069 | Color 13        |
|           |                                    | 070 ⇔ 074 | Color 14        |
|           |                                    | 075 ⇔ 079 | Color 15        |
|           |                                    | 080 ⇔ 084 | Color 16        |
|           |                                    | 085 ⇔ 089 | Color 17        |
|           |                                    | 090 ⇔ 094 | Color 18        |
|           |                                    | 095 ⇔ 099 | Color 19        |
|           |                                    | 100 ⇔ 104 | Color 20        |
|           |                                    | 105 ⇔ 109 | Color 21        |
|           |                                    | 110 ⇔ 114 | Color 22        |
|           |                                    | 115 ⇔ 119 | Color 23        |
|           |                                    | 120 ⇔ 124 | Color 24        |
|           |                                    | 125 ⇔ 129 | Color 25        |
|           |                                    | 130 ⇔ 134 | Color 26        |
| 135 ⇔ 139 | Color 27                           |           |                 |
| 140 ⇔ 144 | Color 28                           |           |                 |
| 145 ⇔ 149 | Color 29                           |           |                 |
| 150 ⇔ 154 | Color 30                           |           |                 |
| 155 ⇔ 159 | Color 31                           |           |                 |
| 160 ⇔ 164 | Color 32                           |           |                 |
| 165 ⇔ 169 | Color 33                           |           |                 |
| 170 ⇔ 174 | Color 34                           |           |                 |
| 175 ⇔ 179 | No function                        |           |                 |
| 180 ⇔ 201 | Color scroll, fast to slow         |           |                 |
| 202 ⇔ 207 | Hold                               |           |                 |
| 208 ⇔ 229 | Reverse color scroll, fast to slow |           |                 |
| 230 ⇔ 234 | No function                        |           |                 |
| 235 ⇔ 249 | Color snap, fast to slow           |           |                 |
| 250 ⇔ 255 | No function                        |           |                 |
| 14        | Zoom                               | 000 ⇔ 255 | 0–100%          |



## QUICK REFERENCE GUIDE



### Rogue R1 Beam Wash

| Channel   | Function                                      | Value     | Percent/Setting               |
|-----------|---|-----------|-------------------------------|
| <b>15</b> | <b>Control</b><br>(5 second activation delay) | 000 ⇔ 009 | No function                   |
|           |   | 010 ⇔ 014 | Blackout during pan/tilt      |
|           |   | 015 ⇔ 049 | No function                   |
|           |   | 050 ⇔ 054 | Pan reset                     |
|           |   | 055 ⇔ 059 | Tilt reset                    |
|           |   | 060 ⇔ 064 | Zoom reset                    |
|           |   | 065 ⇔ 069 | No function                   |
|           |   | 070 ⇔ 074 | Reset all                     |
|           |   | 075 ⇔ 079 | No function                   |
|           |   | 080 ⇔ 084 | Reverse pan and tilt movement |
|           |   | 085 ⇔ 089 | Reverse pan movement          |
|           |   | 090 ⇔ 094 | Reverse tilt movement         |
|           |   | 095 ⇔ 099 | Normal pan movement           |
|           |   | 100 ⇔ 104 | Normal tilt movement          |
|           |   | 105 ⇔ 109 | Normal pan and tilt movement  |
|           |   | 110 ⇔ 119 | No function                   |
|           |   | 120 ⇔ 124 | Fan ECO mode                  |
|           |   | 125 ⇔ 129 | Fan full speed                |
|           |   | 130 ⇔ 134 | Fan auto mode                 |
|           |   | 135 ⇔ 139 | Fast dimmer curve             |
|           |   | 140 ⇔ 144 | Smooth dimmer curve           |
|           |   | 145 ⇔ 240 | No function                   |
|           |   | 241 ⇔ 245 | White mode on                 |
|           |   | 246 ⇔ 250 | White mode off                |
|           |   | 251 ⇔ 255 | No function                   |

14CH

| Channel   | Function                          | Value     | Percent/Setting                         |
|-----------|-----------------------------------|-----------|---|
| 1         | Pan                               | 000 ⇔ 255 | 0–100%                                  |
| 2         | Fine Pan                          | 000 ⇔ 255 | Fine control (16-bit)                   |
| 3         | Tilt                              | 000 ⇔ 255 | 0–100%                                  |
| 4         | Fine Tilt                         | 000 ⇔ 255 | Fine control (16-bit)                   |
| 5         | Pan/Tilt Speed                    | 000 ⇔ 255 | Fast to slow                            |
| 6         | Dimmer                            | 000 ⇔ 255 | 0–100%                                  |
| 7         | Strobe                            | 000 ⇔ 019 | Off                                     |
|           |                                   | 020 ⇔ 024 | On                                      |
|           |                                   | 025 ⇔ 064 | Strobe, fast to slow                    |
|           |                                   | 065 ⇔ 069 | On                                      |
|           |                                   | 070 ⇔ 084 | Fast on, slow off (fast to slow)        |
|           |                                   | 085 ⇔ 089 | On                                      |
|           |                                   | 090 ⇔ 104 | Slow on, fast off (fast to slow)        |
|           |                                   | 105 ⇔ 109 | On                                      |
|           |                                   | 110 ⇔ 124 | Random strobe, fast to slow             |
|           |                                   | 125 ⇔ 129 | On                                      |
|           |                                   | 130 ⇔ 144 | Random fast on, slow off (fast to slow) |
|           |                                   | 145 ⇔ 149 | On                                      |
|           |                                   | 150 ⇔ 164 | Random slow on, fast off (fast to slow) |
|           |                                   | 165 ⇔ 169 | On                                      |
| 170 ⇔ 184 | Pulse strobe, fast to slow        |           |   |
| 184 ⇔ 189 | On                                |           |   |
| 190 ⇔ 204 | Random pulse strobe, fast to slow |           |   |
| 205 ⇔ 209 | On                                |           |   |
| 210 ⇔ 224 | Slow on, slow off (fast to slow)  |           |   |
| 225 ⇔ 229 | On                                |           |   |
| 230 ⇔ 244 | Pulse strobe, fast to slow        |           |   |
| 245 ⇔ 255 | On                                |           |   |
| 8         | Red                               | 000 ⇔ 255 | 0–100%                                  |
| 9         | Green                             | 000 ⇔ 255 | 0–100%                                  |
| 10        | Blue                              | 000 ⇔ 255 | 0–100%                                  |
| 11        | White                             | 000 ⇔ 255 | 0–100%                                  |

## QUICK REFERENCE GUIDE



### Rogue R1 Beam Wash

| Channel   | Function                           | Value     | Percent/Setting |
|-----------|------------------------------------|-----------|-----------------|
| 12        | Color                              | 000 ⇔ 004 | No function     |
|           |                                    | 005 ⇔ 009 | Color 1         |
|           |                                    | 010 ⇔ 014 | Color 2         |
|           |                                    | 015 ⇔ 019 | Color 3         |
|           |                                    | 020 ⇔ 024 | Color 4         |
|           |                                    | 025 ⇔ 029 | Color 5         |
|           |                                    | 030 ⇔ 034 | Color 6         |
|           |                                    | 035 ⇔ 039 | Color 7         |
|           |                                    | 040 ⇔ 044 | Color 8         |
|           |                                    | 045 ⇔ 049 | Color 9         |
|           |                                    | 050 ⇔ 054 | Color 10        |
|           |                                    | 055 ⇔ 059 | Color 11        |
|           |                                    | 060 ⇔ 064 | Color 12        |
|           |                                    | 065 ⇔ 069 | Color 13        |
|           |                                    | 070 ⇔ 074 | Color 14        |
|           |                                    | 075 ⇔ 079 | Color 15        |
|           |                                    | 080 ⇔ 084 | Color 16        |
|           |                                    | 085 ⇔ 089 | Color 17        |
|           |                                    | 090 ⇔ 094 | Color 18        |
|           |                                    | 095 ⇔ 099 | Color 19        |
|           |                                    | 100 ⇔ 104 | Color 20        |
|           |                                    | 105 ⇔ 109 | Color 21        |
|           |                                    | 110 ⇔ 114 | Color 22        |
|           |                                    | 115 ⇔ 119 | Color 23        |
|           |                                    | 120 ⇔ 124 | Color 24        |
|           |                                    | 125 ⇔ 129 | Color 25        |
|           |                                    | 130 ⇔ 134 | Color 26        |
|           |                                    | 135 ⇔ 139 | Color 27        |
|           |                                    | 140 ⇔ 144 | Color 28        |
|           |                                    | 145 ⇔ 149 | Color 29        |
|           |                                    | 150 ⇔ 154 | Color 30        |
|           |                                    | 155 ⇔ 159 | Color 31        |
|           |                                    | 160 ⇔ 164 | Color 32        |
|           |                                    | 165 ⇔ 169 | Color 33        |
| 170 ⇔ 174 | Color 34                           |           |                 |
| 175 ⇔ 179 | No function                        |           |                 |
| 180 ⇔ 201 | Color scroll, fast to slow         |           |                 |
| 202 ⇔ 207 | Hold                               |           |                 |
| 208 ⇔ 229 | Reverse color scroll, fast to slow |           |                 |
| 230 ⇔ 234 | No function                        |           |                 |
| 235 ⇔ 249 | Color snap, fast to slow           |           |                 |
| 250 ⇔ 255 | No function                        |           |                 |
| 13        | Zoom                               | 000 ⇔ 255 | 0–100%          |

| Channel   | Function                               | Value     | Percent/Setting               |
|-----------|--|-----------|-------------------------------|
| 14        | Control<br>(5 second activation delay) | 000 ⇔ 009 | No function                   |
|           |  | 010 ⇔ 014 | Blackout during pan/tilt      |
|           |  | 015 ⇔ 049 | No function                   |
|           |  | 050 ⇔ 054 | Pan reset                     |
|           |  | 055 ⇔ 059 | Tilt reset                    |
|           |  | 060 ⇔ 064 | Zoom reset                    |
|           |  | 065 ⇔ 069 | No function                   |
|           |  | 070 ⇔ 074 | Reset all                     |
|           |  | 075 ⇔ 079 | No function                   |
|           |  | 080 ⇔ 084 | Reverse pan and tilt movement |
|           |  | 085 ⇔ 089 | Reverse pan movement          |
|           |  | 090 ⇔ 094 | Reverse tilt movement         |
|           |  | 095 ⇔ 099 | Normal pan movement           |
|           |  | 100 ⇔ 104 | Normal tilt movement          |
|           |  | 105 ⇔ 109 | Normal pan and tilt movement  |
|           |  | 110 ⇔ 119 | No function                   |
|           |  | 120 ⇔ 124 | Fan ECO mode                  |
|           |  | 125 ⇔ 129 | Fan full speed                |
|           |  | 130 ⇔ 134 | Fan auto mode                 |
|           |  | 135 ⇔ 139 | Fast dimmer curve             |
|           |  | 140 ⇔ 144 | Smooth dimmer curve           |
|           |  | 145 ⇔ 240 | No function                   |
| 241 ⇔ 245 | White mode on                          |           |                               |
| 246 ⇔ 250 | White mode off                         |           |                               |
| 251 ⇔ 255 | No function                            |           |                               |